

REALTEK

iOS Bluetooth Config APP User Guide

iOS Bluetooth Config APP User Guide

Date: 2019/02/26

Version: 2.1

This document is subject to change without notice. The document contains Realtek confidential information and must not be disclosed to any third party without appropriate NDA.

Change History

Version	Data	Digest
1.0	2017-01-10	Introduce <i>Bluetooth Config</i> iOS app usage.

Contents

iOS Bluetooth Config APP User Guide	0
1 iOS Bluetooth Config APP user guide.....	3
1.1 Realtek Bluetooth Config Procedure	3
1.1.1 Bluetooth Operation(scan and connection).....	3
1.1.2 WiFi Operation(scan, connection and position detection).....	4

1. iOS Bluetooth Config APP user guide

1.1 Realtek Bluetooth Config Procedure


1.1.1 Bluetooth Operation (scan and connection)



Click the app icon to launch it. If the Bluetooth is not enabled, it will give a warning message to remind user to enable Bluetooth at iOS system settings.




If Bluetooth device has been found, iDevice starts to connect

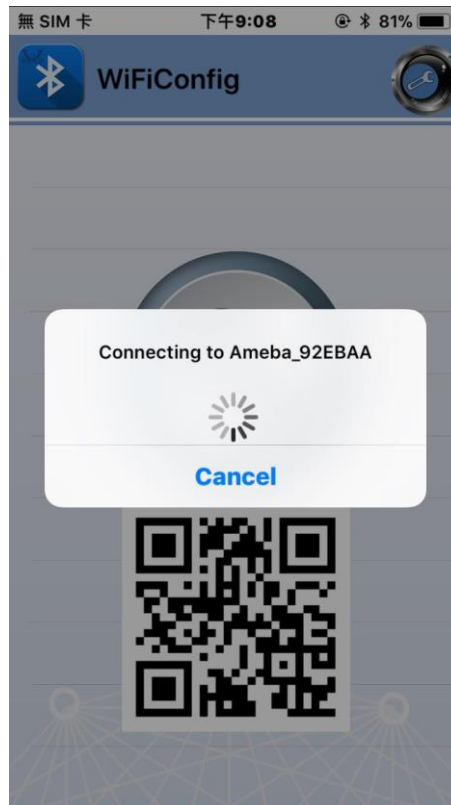

1.2.1 WiFi Operation(scan, connection and position detection)


If iDevice has connected to Bluetooth device successfully, it will scan the Wifi AP list automatically

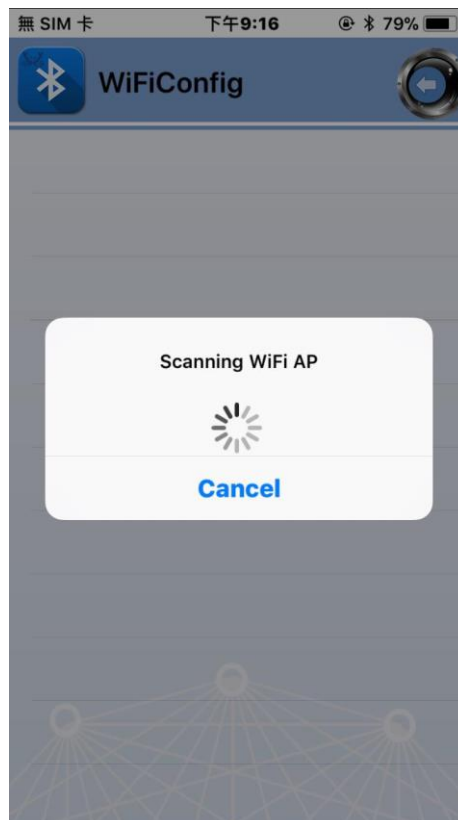


The scan results will be shown and update .




Select one SSID in WiFi AP list, a dialog will popup to notify user to input the WiFi password. After finishing input the WiFi password, please press the "Next" button to start the realtek's wifi device connection with the selected AP.

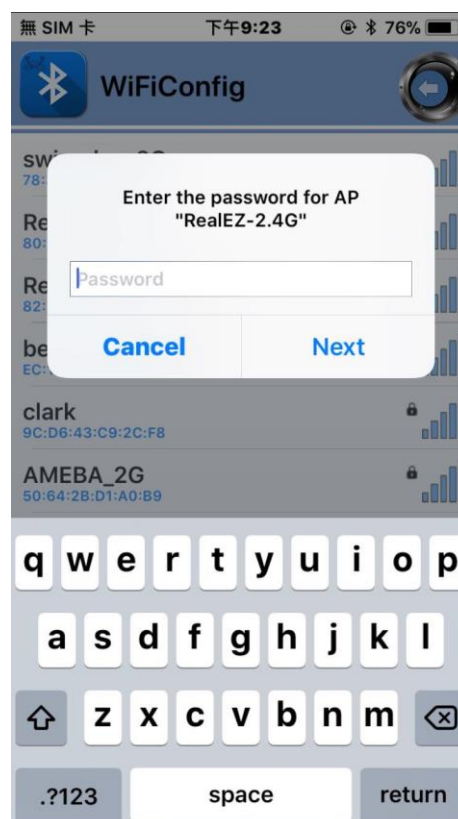


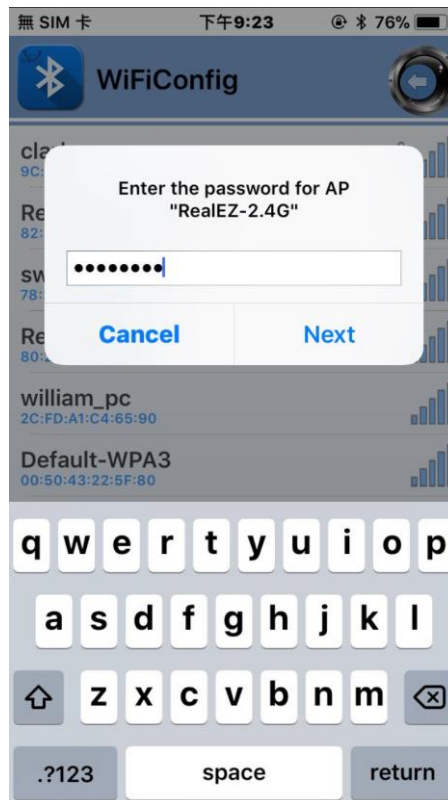

Due to realtek's wifi client connects to remote ap need taking a while, the waiting dialog will be displayed

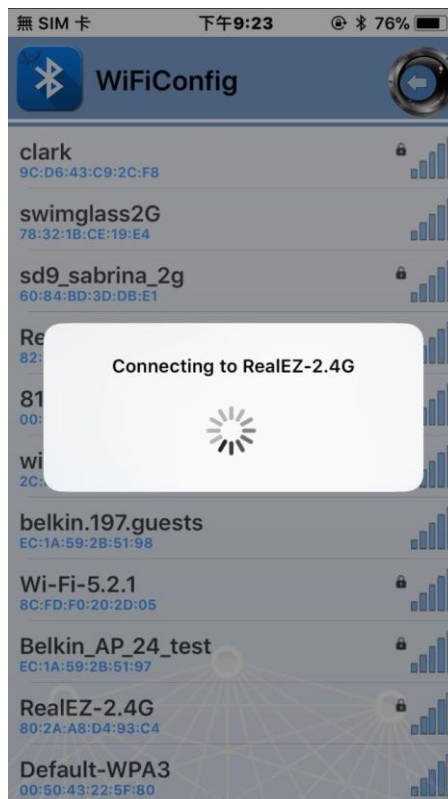

After realtek's wifi client has connected to remote AP successfully, the connect status dialog is shown as below.

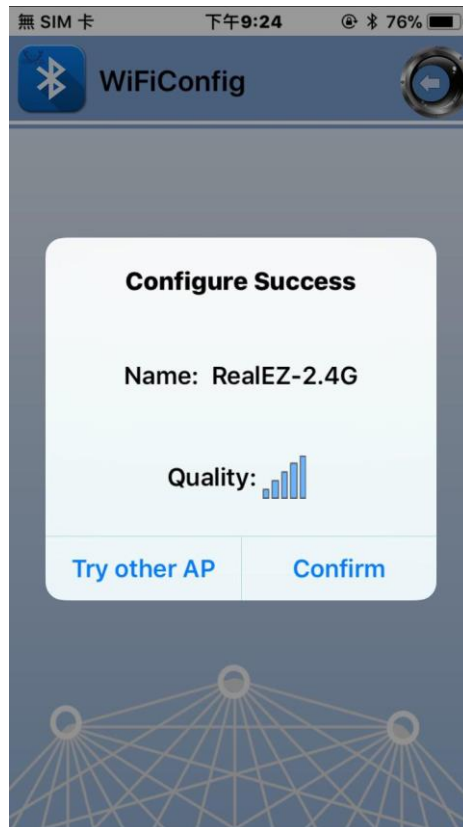

Click “Try other AP” button to go back to WiFi list page and choose other AP to connect to.
Click “Confirm” button to confirm BTConfig result. After clicking this button, realtek's wifi client and iDevice Bluetooth will be disconnected.